



TEMPLATE FOR 7300 SERIES EXIT RIM DEVICE (1:1)

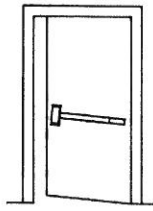

LHR

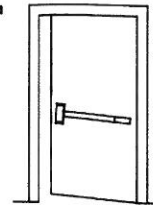

LHR

FOLD TOWARD YOU ON THIS
LINE AND PLACE THIS EDGE
AGAINST FACE OF STOP

IF CYLINDER ONLY IS USED.
DRILL 1 5/8" (33mm) DIA. HOLE
FROM INSIDE OF DOOR.

FOR SEX BOLT DRILL
3/8" (9.6mm) HOLE OUTSIDE


IF EXTERIOR
ACCESS BY
LEVER/KNOB TRIM
DRILL 2 1/8" (54mm)
DIAMETER HOLE

LINE UP WITH 5/8"
ON DOOR

STRIKE FOR RIM DEVICE ONLY


These special two labelled holes are designed
for installation of specified outside trim, please
DO NOT drill the holes on door if the outside
trim is not needed to be fixed by them.

This mounting hole is
NO NEEDED if there
is NO OUTSIDE TRIM
application

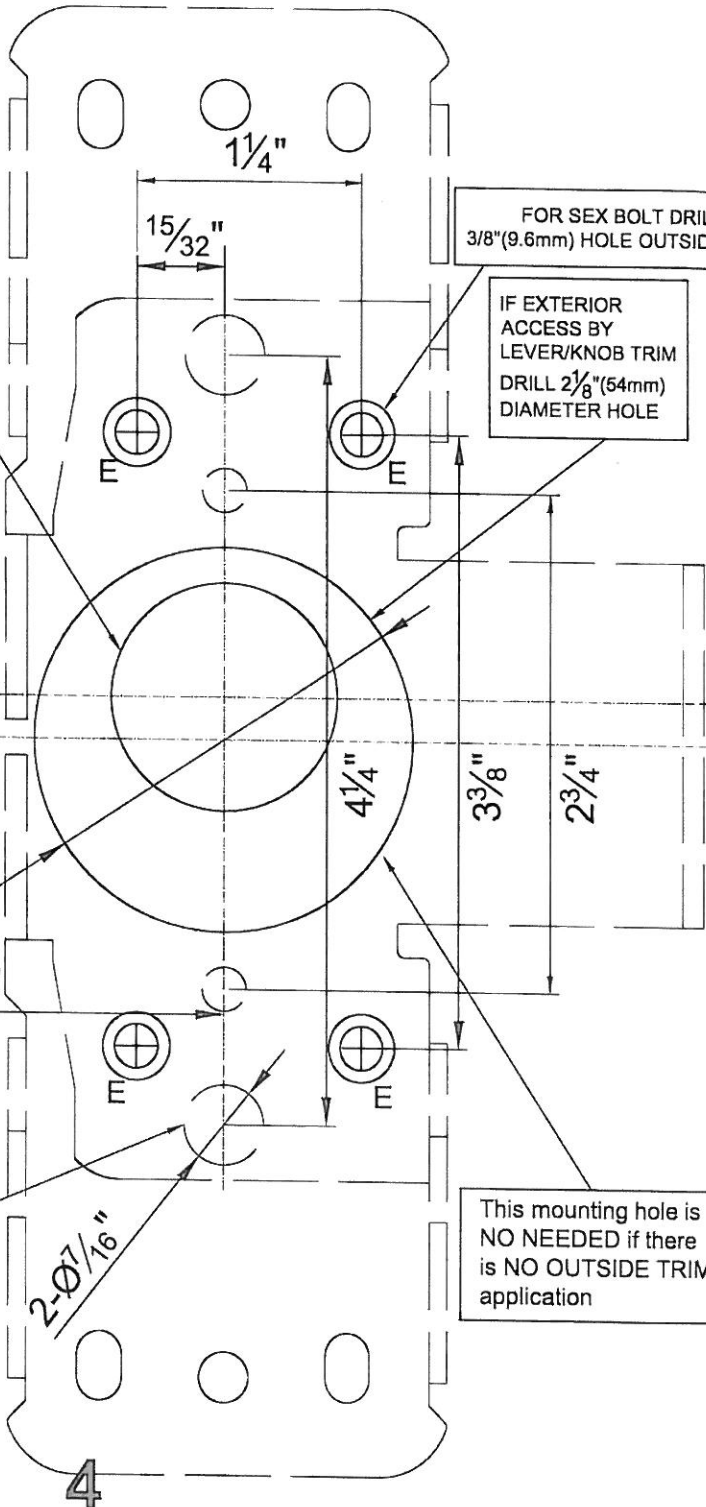


TEMPLATE FOR 7300 SERIES EXIT RIM DEVICE

(1:1)

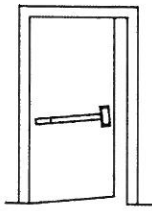

RHR

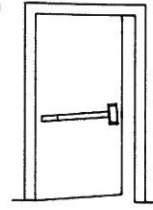

RHR

