
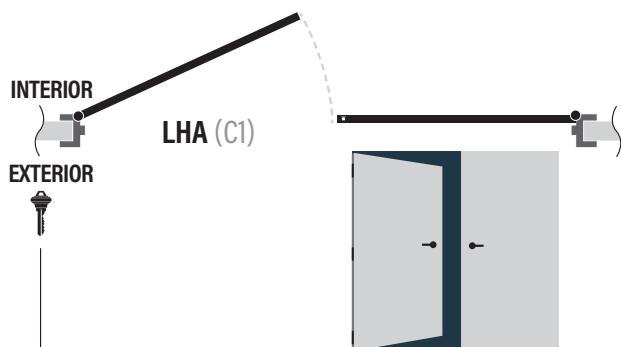
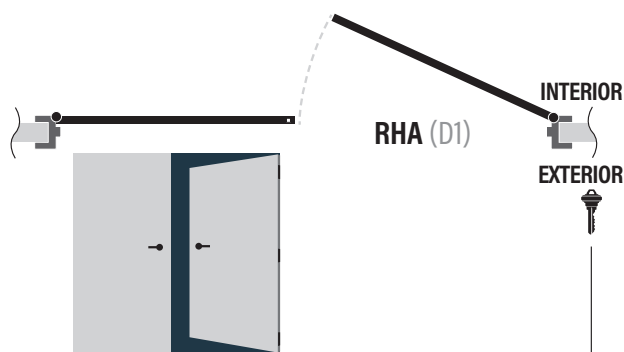
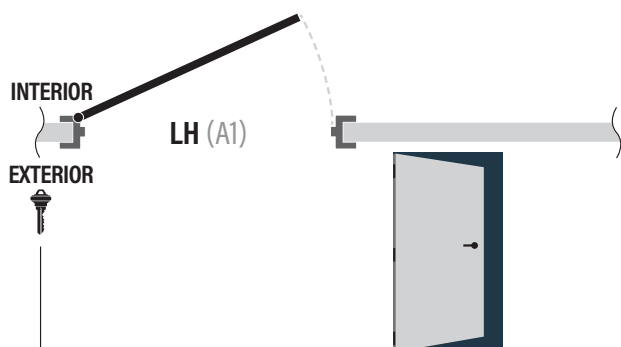


Handing of doors and frames presents a problem for many, even within the door industry. To reduce the chance of error, specify the desired swing using the letters in the illustrations shown below.

HANDING — IN-SWING

HANDING	IN-SWING	HOLLOW METAL	METAL BUILDING
RIGHT HAND		RH	(B1)
LEFT HAND		LH	(A1)
RIGHT HAND ACTIVE (PAIRS)		RHA	(D1)
LEFT HAND ACTIVE (PAIRS)		LHA	(C1)

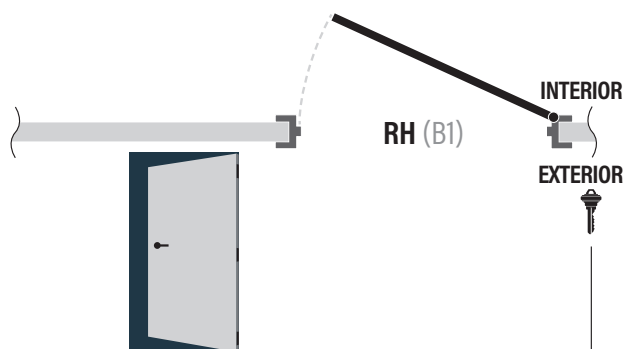

HANDING — OUT-SWING (REVERSE)

HANDING	OUT-SWING	HOLLOW METAL	METAL BUILDING
RIGHT HAND REVERSE		RHR	(B)
LEFT HAND REVERSE		LHR	(A)
RIGHT HAND REVERSE ACTIVE (PAIRS)		RHRA	(D)
LEFT HAND REVERSE ACTIVE (PAIRS)		LHRA	(C)

